

Replacing Visonic Detector Batteries

1. Ensure system is fully disarmed
2. Remove detector cover
3. If speech dialler is enabled on your system, you will receive a call from the system stating tamper alarm – after hearing the voice message press 2 to acknowledge and stand down the call
4. Remove old battery, wait 90 seconds then insert new battery
5. Replace cover and reset panel if required by pressing the OK button continually to acknowledge all messages until the system returns to normal day status

Battery Types

Magnetic door contacts – CR2 (recommended replacement Sanyo or GP)

PIR – CR123 (recommended replacement Sanyo or GP)

Keyfob – GP23

Control panel & external siren batteries can be purchased through us